



[→ Product Website](#)

The perfect all-rounder for the office. The FlexScan EV2430-BK is your ideal assistant in the office for everyday work. This handy all-rounder features power managing functionality and an ergonomic design and it's easy on your eyes for long days in the office. It features three signal ports to connect to computers. In addition, there is a USB hub and headphone/audio jacks that are situated on the side of the monitor. Modern IPS technology enables the FlexScan EV2430-BK to offer horizontal and vertical viewing angles of 178°. Auto EcoView, the brightness sensor, prevents disruptive glaring and reduces strain on the eyes. It also detects changes in the ambient light, automatically adjusting the screen brightness throughout the course of the day.

- ✓ A 24-inch LCD monitor with 16:10 aspect ratio and LED technology in an ergonomic, space-saving design
- ✓ Contrast 1000:1, brightness 300 cd/m²
- ✓ Auto EcoView, EcoView Index, EcoView Sense, and EcoView Optimizer for maximum power savings and superb ergonomics
- ✓ Integrated speakers and headphone jack
- ✓ USB hub with one upstream and two downstream ports
- ✓ DisplayPort, DVI-D, and D-sub ports for digital and analogue connections
- ✓ 5-year warranty for highest investment security

Image quality

Precise, high-contrast, bright and crisp screen


Maximum image quality thanks to the IPS panel

The monitor is capable of all three key elements of excellent image quality: excellent resolution of 1920 x 1200 pixels, maximum contrast of 1000:1, and stable brightness of up to 300 cd/m². That means you will experience razor-sharp text contours, brilliant graphics, and clear images. Thanks to the high-quality IPS panels with LED backlight, contrasts and colours remain stable from every viewing angle.




Precise color control

An image can only be perfect if the colors are, too. This is why EIZO monitors have a 10-bit look-up table at a minimum, which allows the color information to be assigned much more precisely than with conventional 8-bit LUTs. The finest color gradations ensure that gradients are always perfectly displayed, while also offering customised adjustment options. For example, you can adjust the white balance from 4000 K to 10 000 K in 500-K intervals.

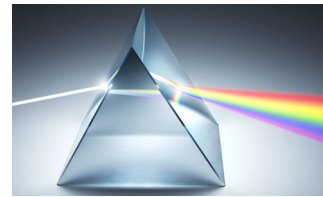

Look-Up-Table with 10 and more bit

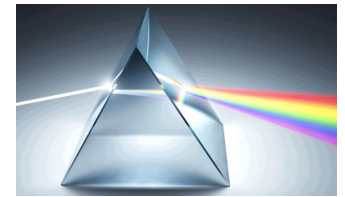

Look-Up-Table with 8 bit

Overdrive to quickly change images

The overdrive function accelerates the switching time so that gray-grey changes take place in just 14 ms on average. You can watch movies and fast image changes without annoying afterglow. When scrolling and positioning windows or images, the display is legible in fractions of a second - faster than it can be perceived. Power consumption and energy efficiency are always in view.

Ergonomics

Working in a relaxed manner


Easy on the eyes with Auto EcoView

At day, at night, bright, dark: No matter when and how you work, the Auto EcoView function continuously measures changes of the ambient light and optimises the monitor with ideal brightness values automatically by using a sensor. The benefits: Annoying glare is reduced, your eyes will not get tired as quickly. A special two-point control takes into account the brightest and darkest environment over the course of the day with the respectively desired screen brightness. Another plus: the automatic brightness adjustment can significantly reduce power consumption.

Of course, you can also continue to configure the monitor manually. EcoView Index is used for orientation on how economical your settings are.



During the day

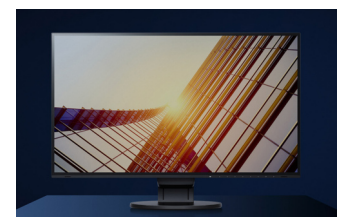

In the evening

FOR THE SAKE OF THE EYES


Flicker free

To help protect your eyes, EIZO has developed a hybrid technology to control the backlight. This combines the benefits of the otherwise standard PWM (pulse width modulation) and DC (direct current) control. The PWM control uses much higher frequencies than standard PWM methods. The result: a flicker-free viewing experience while maintaining picture quality and colour stability. In addition, compared to pure DC control, you can adjust the brightness to less than 1% of the maximum value in darkly lit rooms. The benefit: Your screen remains free from flicker and glare even under these conditions.

The flicker-free and low blue light content of the EIZO FlexScan monitors is certified by TÜV Rheinland.


Anti-glare coating: more image, less reflection

The EV2430 offers a perfect, non-glare surface. By minimising glare by diffusing the reflected light, the EV2430 effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.

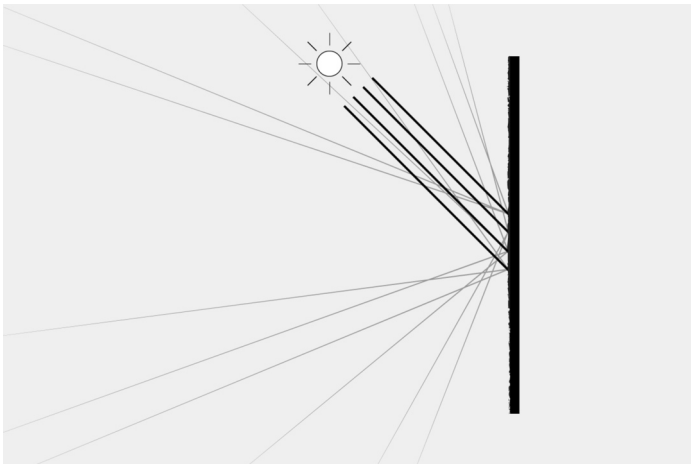


Ergonomic stand


Ergonomic and stable: the adjustable stand focuses on ergonomics. You can rotate, swivel and tilt the monitor stand until you find the most comfortable setting for your back, neck and sitting posture. It features continuous height adjustment and can be lowered almost to the base plate of the stand, enabling you to position the top image line ergonomically right below your eye level.

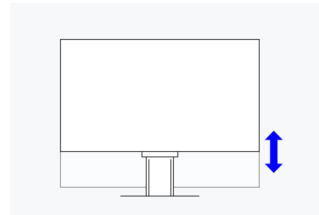


Height
140 mm

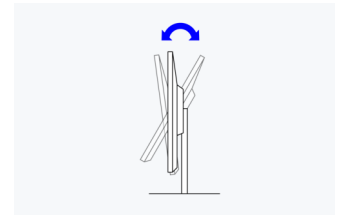

Tilt
Between 5° forwards and 35° backwards

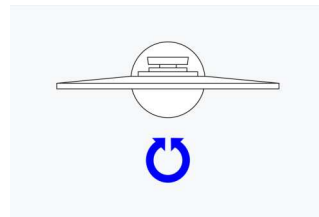

Swivel
344°

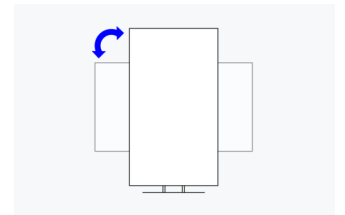

Rotation
clockwise

Variety of ports Best connectivity

One monitor, many ports


It couldn't be easier: Most end devices, such as PC, laptop, mouse, keyboard or headphones, can be connected directly to the monitor, thanks to its wide range of signal interfaces and ports. This makes your daily work easier and ensures a tidy desk.



Software and ease of use Features for greater comfort

Preset color modes: optimized display at the touch of a button

Preset color modes optimize the viewing of images, texts or videos. Because it makes a difference whether you are watching a video, looking at a picture, surfing the net or writing texts. At the touch of a button, you can set the respective preset for brightness, gamma correction and color temperature. An example: Paper mode simulates the pleasant contrast of printed paper, making reading easier on the eyes and preventing fatigue.

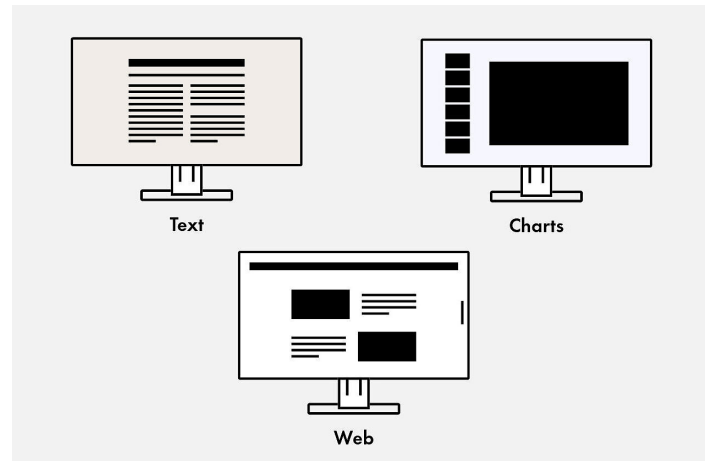

Sustainability Environmentally and socially conscious production

Save energy effortlessly

Energy efficiency is an important aspect in the development of EIZO monitors. The monitors are equipped with features and functions to reduce power consumption to a minimum.

Up to 50% less power consumption

The Auto EcoView function automatically adjusts the brightness of the screen to changes in ambient light. This saves electricity compared to a monitor that is operated at a constant brightness. Of course, you can still adjust the monitor manually. The EcoView index serves as a guide to how economical your setting is.

The EcoView Optimizer automatically reduces the backlight in dark images, thereby reducing power consumption. At the same time, the signal is amplified and the color tone values are adjusted. The result: you experience the usual image quality with lower consumption.

These EcoView technologies reduce overall power consumption by up to 50%* compared to the display at maximum brightness. Another plus: the automatic brightness adjustment can be easy on your eyes.

* Typical power consumption when no USB Power Delivery is used.

Zero-watt consumption thanks to the power switch

The monitors have an integrated mechanical power switch, which is extremely practical and energy-saving: If you switch off the monitor using the power switch, the device will stop consuming any power at all. Moreover, it consumes a maximum of 0.3 watt in standby mode.



Comprehensive product sustainability

FlexScan monitors from EIZO are produced in accordance with international environmental regulations and in a socially responsible manner. Suppliers along the supply chain are carefully selected and have also committed themselves to this responsibility. During the design process, attention was paid to the low use of resources with high-quality components and materials as well as careful production. In addition, FlexScan monitors protect resources and the climate thanks to their long service life, warranty and repairability.

[Read detailed information about product sustainability here.](#)



Warranty

Highest investment security

Five-year warranty

EIZO grants a five-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.



Technical Data

GENERAL

Item no.	EV2430-BK EV2430-GY
Case color	Black Light gray
Areas of application	Office
Product line	FlexScan
Areas of application	Large and medium-sized companies, Private user & small business, Finance
Specific system requirements	None, compatible with most computers and operating systems including macOS and Windows
EAN	4995047052999 4995047052982

SCREEN

Screen size [in inches]	24.1
Screen size [in cm]	61.1
Format	16:10
Viewable image size (width x height) [in mm]	518 x 324
Ideal and recommended resolution	1920 x 1200
Pixel pitch [in mm]	0.27 x 0.27
Pixel density [in ppi]	94
Supported resolutions	1920 x 1200, 1680 x 1050, 1600 x 1200, 1280 x 1024, 1024 x 768, 800 x 600, 720 x 400, 640 x 480
Panel technology	IPS
Max. viewing angle horizontal	178
Max. viewing angle vertical	178
Number of colors or greyscale	16.7 million colors (D-Sub, 8 Bit), 16.7 million colors (DVI, 8 Bit), 16.7 million colors (DisplayPort, 8 Bit)
Color palette/look-up table	1.06 billion color tones / 10 Bit
Max. color space (typical)	sRGB
Max. brightness (typical) [in cd/m ²]	300
Max. dark room contrast (typical)	1000:1
Response time grey-grey alternation (typical) [in ms]	14
Backlight	LED

CONNECTIONS

Signal inputs	DisplayPort (HDCP 1.3), DVI-D (HDCP 1.4), D-Sub
USB specification	USB 2
USB upstream ports	1 x type B
USB downstream ports	2x type A
Graphic signal	DVI Single Link (TMDS), RGB Analog, DisplayPort
Sync formats	Separate
Audio input	3.5 mm stereo jack, DisplayPort
Audio / headphone output	3.5 mm stereo jack

FEATURES & OPERATION

Preset color/greyscale modes	2x manual memory locations, sRGB, Paper, Movie
Auto EcoView	✓
EcoView Index	✓
EcoView Optimizer	✓
No flickering	✓
HDCP Decoder	✓
Automatic signal input recognition	✓
Built-in speakers	✓
On-screen menu languages	de, en, fr, es, it, se
Adjustment options	Color Mode, Brightness, Contrast, Color temperature /White point, Gamma, Colour tone, Color saturation, Resolution, Scaling, OSD language, Signal input, All EcoView functions, Volume
Integrated power unit	✓

ELECTRICAL DATA

Frequency	Display Port: 31-76 kHz/59-61 Hz; DVI-D: 31-76 kHz/59-61 Hz; D-Sub: 31-76 kHz/55-61 Hz;
Power consumption (typical) [in watts]	12
Maximum Power Consumption [in watts]	36 (at maximum brightness with all signal inputs and USB ports in use)
Max. Power consumption in stand-by mode [in watts]	0.3
Power consumption with power switch off [in watts]	0
Energy efficiency class	E
Energy consumption/1000h [in kWh]	15
Power supply	AC 100-120 V / 200-240 V, 50/60 Hz

DIMENSIONS & WEIGHT

Dimensions (incl. stand) (width x height x depth) [in mm]	553 x 368-499 x 233
Weight (incl. stand) [in kg]	6.7
Dimensions (without stand) (width x height x depth) [in mm]	553 x 358 x 57
Weight (without stand) [in kg]	4.3
Dimension drawing (PDF)	Dimension drawing (PDF)
Rotatability of the stand [in °]	344
Tiltability forwards/backwards [in °]	5 / 35
Pivot between portrait / landscape	clockwise
Height adjustment range [in mm]	140
Hole spacing	100 x 100

CERTIFICATION & STANDARDS

Certification	CE, UKCA, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), TCO Certified Generation 8, EPEAT 2018 (US), TÜV/Low Blue Light Content, TÜV/Flicker Free, RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, PSE, VCCI-B, EPA ENERGY STAR, RoHS, WEEE, China RoHS, CCC
---------------	--



FlexScan EV2430

SOFTWARE & ACCESSORIES

Other box contents Signal cable DVI-D - DVI-D, Signal cable DisplayPort - DisplayPort, Power cord, Quick guide

Accessories PM200-K (DisplayPort cable to transfer digital video and audio signals)

WARRANTY

Warranty periode 5 years for unit and LCD module up to 30,000 operating hours, whichever comes first.

Included warranty Zero pixel defects guarantee; no fully illuminated sub-pixels (sub-pixels ISO 9241-307) for six months from date of purchase.

Find your EIZO contact:
EIZO Europe GmbH
Belgrader Straße 2
41069 Mönchengladbach
Phone: +49 2161 8210-0
www.eizo.eu

All product names are trademarks or registered trademarks of EIZO Corporation in Japan and other countries or their respective companies. Copyright © 2024 EIZO Europe GmbH, Belgrader Str. 2, 41069 Mönchengladbach, Germany. All rights, errors and modifications reserved. Latest update: 22.12.2024